

**Thank you for your purchase of the atomizer
Columbo I+ RDA!**

Columbo I+ RDA atomizer has been rigorously designed to give you a superior vaping experience: exceptional feeling of taste, vapor at maximum, easy set-up and use.

For more information on how the above are accomplished, please visit our website www.columbovape.com.

To enjoy your Columbo I+ RDA vaping experience at maximum, please read through this manual for proper use and care.

Diameter: 22mm.

Height: 27.6mm.

Net weight: 18 gr (without resistance).

Typical '510' threaded connector type.

Contents

'510' type drip tip adapter (1 item).


Set of spare silicone O-rings (3 items).

Set of M3x3 socket screws (2 items).

'L' key (1 item).

Set of M2 hand screws (2 items).

User manual.

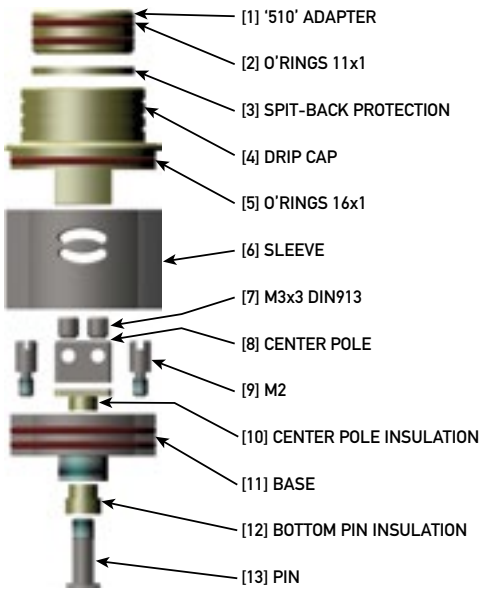

How to set up

Columbo I+ RDA set-up is very easy and completes as following:

Step 1: Screw the RDA on your mod.




Step 2: Pull out the drip cap (4)



and the sleeve (6).



Step 3: Unscrew the socket set screws (7), place the resistance coil lead into the center pole (8) hole and tighten. Place the other end of the resistance coil lead under the head screw on the base (9) and tighten.

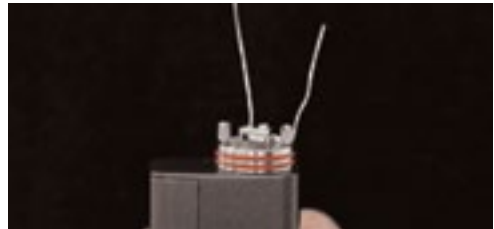

Cut any excess wire.



Repeat the procedure with a second resistance coil in parallel if desired.



Step 4. Pass the cotton wick through the coil wire



and put them inside the base in order to fill up the basin (by using a screwdriver).



Step 5. Fill up the cotton with e-liquid.



Step 6. Place back the sleeve (6)



and the drip cap (4).



How to use

Step 1: Put the spit-back protection plate (3) into the drip cap (4).

Step 2. Choose either to use directly the drip cap mouthpiece or a typical drip tip by using the '510' adapter (1).

Step 3 Align the sleeve airflow holes (6) so the air goes directly on the resistance coils.

Step 4. Adjust the air flow control by rotating the drip cap (4) to the desired position.

How to clean / maintain

Disassemble the parts of the Columbo I+ RDA atomizer (drip tip, drip cap, '510' adapter, spit-back protection plate, sleeve, base, center pole parts, peek insulations, O'rings).

Clean the surfaces of the parts with a dry or slightly wet cloth. You can slightly wet the cloth with clean lukewarm water; you may even immerse any parts in clean lukewarm water and dry them with a clean cloth afterwards.

For the cleaning of the holes and/or internal surfaces, you can use cotton wool or cotton buds.

Only for the cleaning of stainless steel parts, you can wet the cotton wool or cotton buds with alcohol.

Cautions

Cautions for use:

The cotton should always be saturated in liquid before firing your mod. Otherwise, the cotton will burn and you will experience burning taste.

Cautions when cleaning:

Alcohol may be used only for the cleaning of the stainless steel parts and not for the cleaning of the plastic parts.

Make sure all parts are completely dry before use, especially those ones cleaned by alcohol. This requires leaving the parts for some time after the cleaning to allow them dry.

General cautions:

BEFORE USING THE ATOMIZER PLEASE READ THE FOLLOWING:

The atomizer is for vaping only, do not use for other purposes.

Use liquids intended for vaping only.

After setting up the resistance(s) coil(s), check carefully for short circuits. Danger by using shorted atomizer on unprotected battery mod.

Instructions for storage: Keep out of reach of children and pets.

WARNING: This product is not recommended for use by young people or non smokers. It is sold purely for recreational purposes, it is not a smoking cessation product and has not been tested as such.

HEALTH WARNING: This product may be used with liquids containing nicotine which is a highly addictive substance. It is not suitable for persons under the age of 18, women who are pregnant or breast-feeding, for persons with a high risk for heart disease, high blood pressure or diabetes, or for people taking medicines for asthma.

WARRANTY: Columbo I+ RDA Deck atomizer come with a 2-years warranty. For the warranty terms and conditions, please visit our website www.columbovape.com. To validate your warranty, it is necessary that you register online your product following the product registration process at our website, through the link <https://columbovape.com/customer-care/product-registration>.